

# Instruction Manual

Model:LS-609C



# Cirago 2.2L 1450W Garment Steamer

## User's Manual



Congratulations on purchasing the Cirago Professional Sanitizing Garment Steamer. Now you have an easy way to quickly steam away wrinkles and freshen and sanitize fabrics throughout your home. It was made to reach customers needs based on research and study in the market today. Please read and follow all of the instruction bellow to perform steps for smoother and easy operation.

### Table of Contents

Page - 1: **Introduction**

**Table of Contents**

Page - 2,3: **Included in the Package**

**Cautions**

Page - 3: **Parts Illustrations**

Page - 4,8 **Parts Definitions**

**Set - up**


Page - 9: **Filling the Water**

Page - 10, 11: **Cleaning/ Quick Specification**

Page - 12: **Quick Troubleshooting**  
**Customer Service**

## Included in the Package

Please check all of this stated accessories if it was included in the package completely.

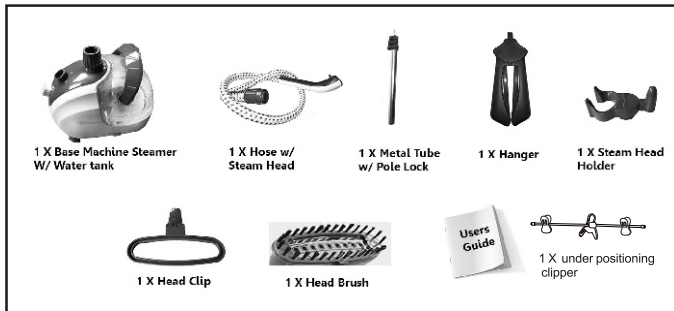


## Cautions

- Please check the power outlet if it is working fine and not grounded.
- Do not leave the product unattended with the power turned on. Unplug the unit from outlet when not in use and before conducting any maintenance or troubleshooting .
- DO NOT use with a damaged cord or plug. Do Not use the Garment Steamer if it has been dropped, damaged, left outdoors or dropped into water. Return to a service center.
- Store the product in a place that is out of the reach of small children. Close attention is necessary when used near children.
- Do not use for any purpose other than described in this User Manual. Use the product only for its intended use and only as described in this manual. Use only authentic product parts and accessories.
- Do not use in close proximity to flammable materials
- Do not handle the power cord with wet hands.
- Store the product in a cool place indoors.
- Do not immerse the unit or expose it to rain.
- Do not spray steam in the direction of another person, animal or electrical outlet.
- Make sure to unplug the power cord prior to filling the product with water, emptying tank or when not in use.
- Do not allow to be used as a toy.
- Not for space heating purposes.
- Never put any aromatic oils or perfumes, chemicals, alcohol or detergent products into the steam cleaner, it may damage the unit or make it unsafe for use.
- Do Not allow the product to be disassembled and/or modified by anyone other than an authorized Blusmart service technician. Doing so can result in fire and/or electrical shock and would void warranty.

- While using the Garment Steamer, steam only in an up and down vertical motion. Never hold steam head down while at rest or tilt it in a backward position as this may result in hot water discharge and possible injury.
- Do not allow cord to contact sharp edges or touch hot surfaces. Let Garment Steamer cool completely before putting away.
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

## Parts Illustration

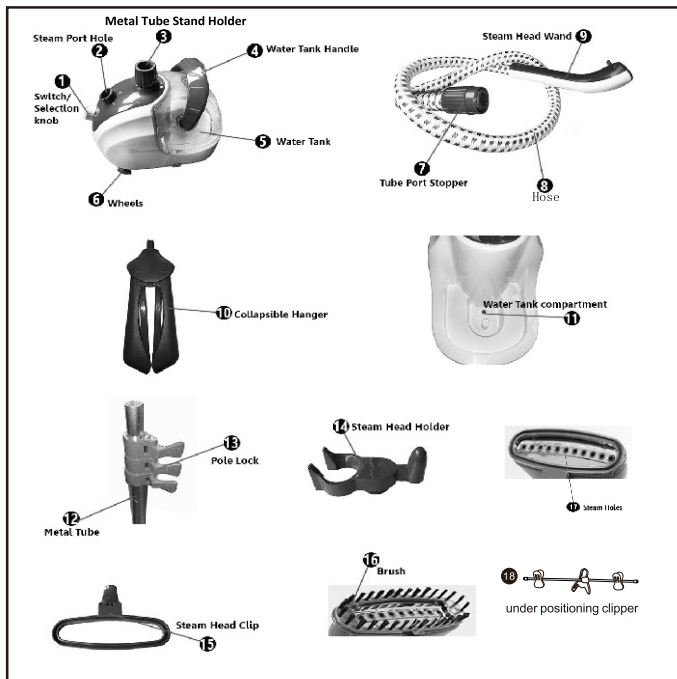


## Parts definition

- 1) **Switch/ Selection Knob:** Use to switch the machine as well as the selector of which type of fabrics you are using for.
- 2) **Steam Port Hole:** A port hole to connect the hose
- 3) **Metal Tube stand holder:** It supports and hold the metal stand for the hanger
- 4) **Water Tank Handle:** Serve as the handheld holder when you pull up the water tank from the compartment
- 5) **Water Tank:** Use to stored water to be dispensed by the machine
- 6) **Wheels:** The four wheels each corner. It can be move anywhere instantly
- 7) **Tube Port Stopper:** This will serve as lock and tighten the connection of the hose to the seam base hole.
- 8) **Hose:** Use as the bridge of the steam to the steam head.
- 9) **Steam Head Wand:** This is the handheld parts and release the steam
- 10) **Collapsible Hanger:** It's a portable hanger which you can compress if not in used, used to hang the clothes
- 11) **Water Tank Compartment:** Place the water tank here
- 12) **Metal Tube:** A support tube and a stand for the hanger
- 13) **Pole Lock:** When you extend the metal tube let this lock holds and make the tube stand in stable
- 14) **Steam head Holder:** This part serve as the head steam holder
- 15) **Steam Head Clip:** This will hold the sleeve and edges of the clothes
- 16) **Brush:** If you remove some extra dirt from the fabrics you can attach and use this brush as well
- 17) **Steam Holes:** This is a tiny Holes on the steam head

## Set-up



Step - 1: Remove the ring stopper by rotating it counterclockwise  
(Picture Shown)

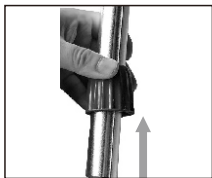

Step-2:

Then attach it to the metal tube.

(Picture Shown)



Step-3:

Then insert it in the tube hole slot.


(Picture Shown)



Step-4:

Lock the stopper ring by twisting it clockwise until tighten and stable.


(Picture Shown)

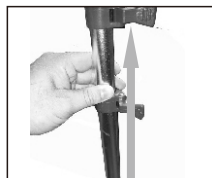

Step-5:

Extend the tube each level, by pulling it up Carefully.

(Picture Shown)

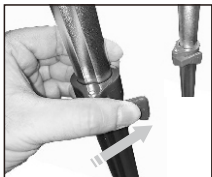


Step-6:

After you full up each tube level, press and fold the lock to provide stability holds for the tube.

(Picture Shown)

Continue until you lock all the 3 levels of the tube.

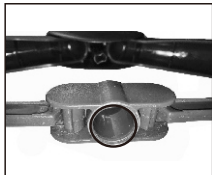


Step - 7:

Get the hanger and make it expand .  
Locate the hole in the center of it.



Step - 8:


Insert in to the very top parts of the metal tube, (Picture Shown) until the tube will reach the other side part of the hanger prong stopper.

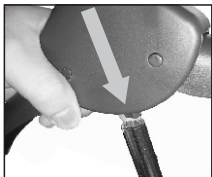

Step - 9:

Let the Hanger prong stopper inserted in the top hole of the tube.

(Picture Shown)

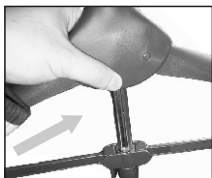

#### Step-9:

Make sure the hanger was completely installed. Like what (Picture Shown)



#### Step - 10:

Now, get the steam head holder and attach it to the hanger's top prong make sure the lining path is in the same correct position, then push it down until it will completely inserted. (Picture Shown)



If you can't push it anymore, means it's fine, a little split in between is normal.



#### Step - 11:

Now, get the hose and attach the connection port to the Steam post hole, make sure the arrow sign point to the unlock sign, then push it down slowly until it will shut completely. (Picture Shown)






**Step - 12:**

Now twist it to the lock sign position, make sure the arrow will point to the locked sign. (Picture Shown)



**Step - 13:**

Hold the Steam head wand and attach the Clip. Just insert the buckle in the clip buckle slot, push it down until you will hear the “click” (Picture Shown)

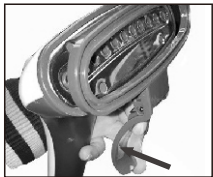

Press the Trigger of the clip if you attached it correctly. (Picture Shown)



In case you need to use the brush, by attaching it on the clip lining hole. Just push it until the back ring of the brush will completely attached. (Picture Shown)



Step - 14:

Detach the water tank from the base and  
Open the seal cover by twisting it  
counterclockwise then remove it.



Step - 15:

Fill it with water carefully up to 2.2L.  
And return the cap cover. Make sure you  
close it tightly.




Step - 16

Before you return the water tank to the  
compartment, make it sure it was totally  
clean and no any dirt on it that may cause  
to block the water dispenser hole, that  
may cause clog, then place the water tank  
in the same position as you remove it in  
the first time. Make sure it was totally  
tack-in the compartment.

## Operations

### Step - 1

Insert the power to the electricity outlet (make sure the outlet was working fine).

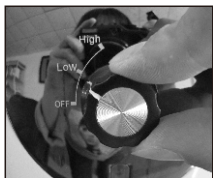

### Step - 2


Turn on the device by veering the control knob to the correct type of fabrics you want to use with. You will heard a tick and the red LED light will turn on. Please wait for 30 sic for the machine to boil the water and start to provide the hot steam. (Picture Shown)

### Step - 3

After you've notice that the Hot Smoke Steam comes out from the steam head you can now use it to fix lines, crazes and wrinkles on your clothes.

## Applying on the Fabrics

Note: The device has multiple options to select what types of fabrics you use: Silk, Plush, Fiber, Cloth, Cotton and Hemp

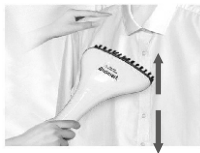

### Step - 1

Just put the steam head facing closer to the cloth and target much wrinkles area, then move it up and down until the wrinkles and crazes will completely gone.



### Step - 2

When using it on the sleeve let the clip holder hold on the opposite side the sleeve craze line will not be deform.

(Picture Shown)

### Cleaning

After Use, be sure to unload the water from the water tank, and rinse it with water carefully.

Clean the water tank compartment with clean and soft dry fabrics as well as the main base machine.

Make sure the Steam head was maintained clean.



The drain plug can enables the steamer easy to clean and maintain, effectively prevent material build-up and bacterial breeding.

### Quick Specifications

Power: 1450W

PackingSize: 52.5 x 36.5 x37.5 cm

Weight: 4.6kg

Temperatu re Ranged : 130°C


Body Casin g: Propene Polymer type

Water Capacity: 2.2 L



**Quick Troubleshooting**

**If the problem persist, please contact us:**  
E-mail: [ciragoservice@163.com](mailto:ciragoservice@163.com)

<p><b>The Device won't turn on and the light is not working?</b></p>	<p>Please check the power outlet if it works fine, and make sure the power cord from the machine has no cuts or opening. Try to change the power outlet make sure the plug was attached perfectly .</p>
<p><b>The machine works fine because the LED light was turned on, but there is no steam came out.</b></p>	<p>Please be sure that you load the water into the water tank, make sure the dispenser hole has no any blockage.</p>
<p><b>I heard loud gurgling sound?</b></p>	<p>The noise is normal, but when you noticed it was too much, please allow the hose in vertically straight position so that the excess water will go back down.</p>
<p><b>Not enough steam, No steam at all.</b></p>	<p>Its normal that steam may slowdown it's because the machine automatically adjust the heating process. But if you noticed that there is no steam at all it's because the sediments formed inside and block the path hole. Tips how to clear it up, follow the next part.</p>
<p><b>How can I deal with it if the garment steamer leak water when I use?</b></p> 	<ol style="list-style-type: none"><li>1.If the garment steamer leak water at your first time, please add the water to make the steamer work, and then drain out the water, add the water again and let the garment steamer work again. Please keep the hose not folded when you use.</li><li>2.If the problems still be happened, please check the white rubber band of tank lock. Whether the rubber band installs tightly with a position that the smooth side is down. As the left picture showed.</li><li>3. If the case can't be solve after 2 steps, please contact us and we will be responsible for you. Thank you.</li></ol>

### **Tips for clearing the sediments Clog**

- Make a vinegar and water cleansing solution. Mix half-and-half for heavy-duty steamers or one-third vinegar to two-thirds water for lighter models.
- Pour the solution into the steamer and turn it on. Let it run until between one-third and one-half of the cleaning solution is gone
- Turn off the steamer Let the remaining solution sit for no less than 15 minutes and no longer than 1 hour.
- Remove the remaining solution.
- Add clean water and turn the steamer on. If it works appropriately, you are done. If it does not, repeat Steps 3 through 5 until it does.

### **Tips for steaming clothes**

In steaming clothes, it is important to know clearly the material of the clothes and select the appropriate steaming level and temperature. You can note the clothes washing standard that will be clearly marked clothes material. and there are also some steaming tips for you.

1. The steaming clothes must be washed and don't dry too dry. If the dress is so dry, you can spray some water on them, which is better for the ironing effect.
2. In summer, about not be washed or not dry clothes, like there will be a little small mildew on them, you can use the water containing vinegar to clean before ironing.
3. You should steam the garment along the direction of the clothing crease line and also need to do so if there is the oblique shear cloth.
4. In general, it is first to iron the opposite of clothes, and then the positive one. so the thick is before the thin, the nylon is before the linen.
5. If there is too deep crease to remove easily, you can spray a little water with vinegar and it will get easier to steam.
6. To steam the women garment, you also can spray a few drops of perfume and the clothes will have pleasant fragrance after steaming.
7. If you want to keep the creases straight on your pants, you can use a cotton dipped in a little vinegar to brush along the creases before steaming.
8. You should hang the steamed clothes up, on one hand is remove away tide heat and the other hand is reducing the likelihood of mold raw rotten.
9. when you finish steaming, you need to pour the water out of the water tank. and use the drain plug to drain the water that is in the bottom of steamer when you take the tank off.